




www.robotsshop.com



La robotique à votre service! - Robotics at your service!



Arduino Mega 2560 Datasheet

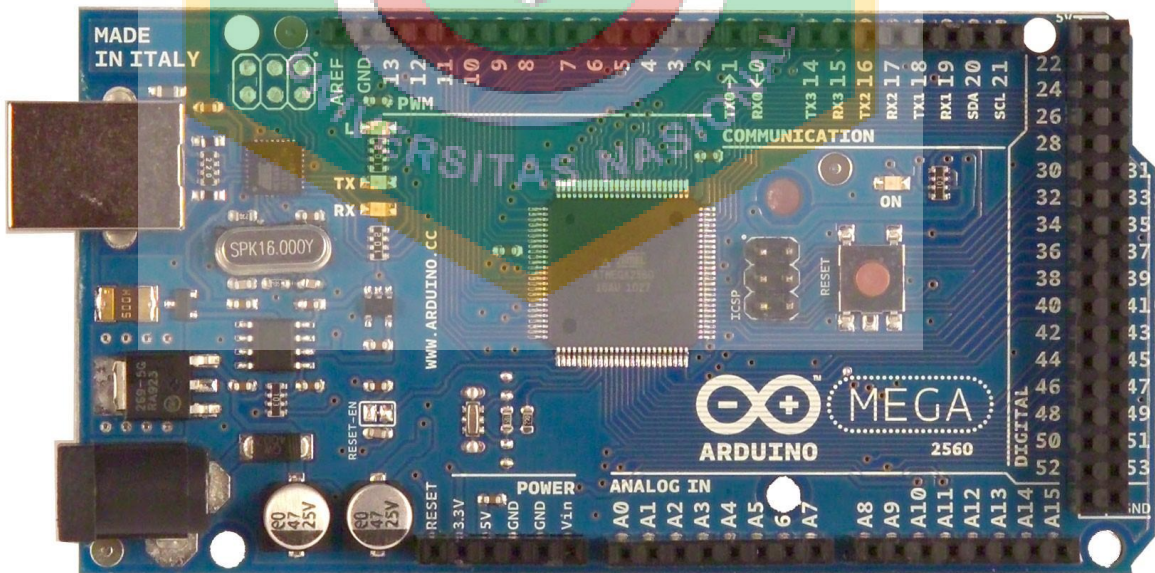



www.robotshop.com



La robotique à votre service! - Robotics at your service!

Schematic: [arduino-mega2560-schematic.pdf](#)

Summary

Microcontroller	ATmega2560
Operating Voltage	5V
Input Voltage (recommended)	7-12V
Input Voltage (limits)	6-20V
Digital I/O Pins	54 (of which 14 provide PWM output)
Analog Input Pins	16
DC Current per I/O Pin	40 mA
DC Current for 3.3V Pin	50 mA
Flash Memory	256 KB of which 8 KB used by bootloader
SRAM	8 KB
EEPROM	4 KB
Clock Speed	16 MHz

Power

The Arduino Mega can be powered via the USB connection or with an external power supply. The power source is selected automatically.

External (non-USB) power can come either from an AC-to-DC adapter (wall-wart) or battery. The adapter can be connected by plugging a 2.1mm center-positive plug into the board's power jack. Leads from a battery can be inserted in the Gnd and Vin pin headers of the POWER connector.

The board can operate on an external supply of 6 to 20 volts. If supplied with less than 7V, however, the 5V pin may supply less than five volts and the board may be unstable. If using more than 12V, the voltage regulator may overheat and damage the board. The recommended range is 7 to 12 volts.

The Mega2560 differs from all preceding boards in that it does not use the FTDI USB-to-serial driver chip. Instead, it features the Atmega8U2 programmed as a USB-to-serial converter.



ESP-01 WiFi Module

Version 1.0

sherry@aithinker.com

Disclaimer and Copyright Notice.

Information in this document, including URL references, is subject to change without notice. THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE. All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein. The WiFi Alliance Member Logo is a trademark of the WiFi Alliance. All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged. Copyright © 2015 AI-Thinker team. All rights reserved.

Notice

Product version upgrades or other reasons, possible changes in the contents of this manual. AI-Thinker reserves in the absence of any notice or indication of the circumstances the right to modify the content of this manual. This manual is used only as a guide, Ai-thinker make every effort to provide accurate information in this manual, but Ai-thinker does not ensure that manual content without error, in this manual all statements, information and advice nor does it constitute any express or implied warranty.



2. Pin Descriptions

There are altogether 8 pin counts, the definitions of which are described in Table 2 below.


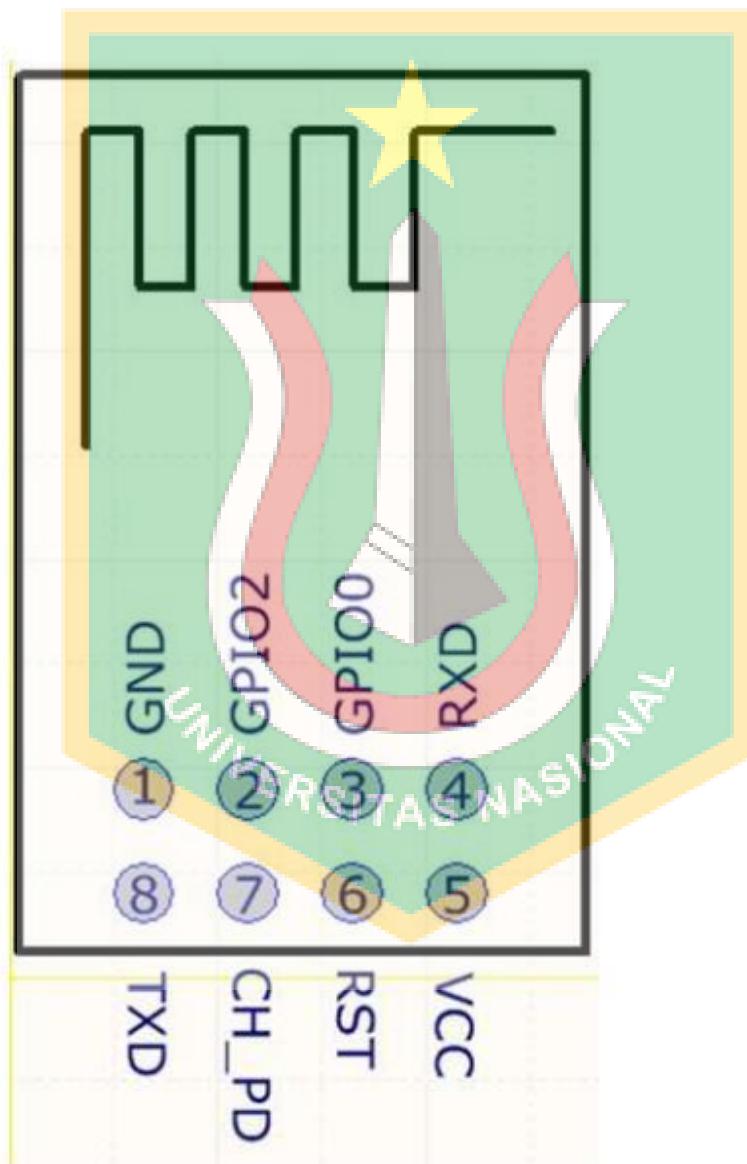


Table 2 ESP-01 Pin design

HY-SRF05 Precision Ultrasonic Sensor

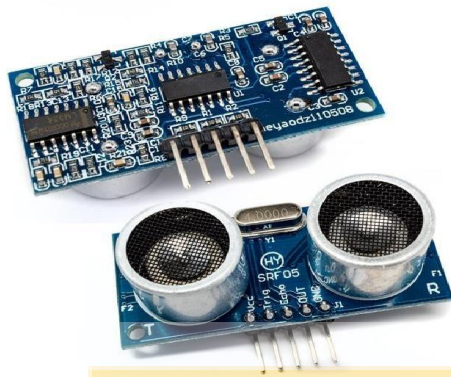

An ultrasonic ranging sensor with slightly better accuracy.

Ultrasonic sensors overcome many of the weaknesses of IR sensors - they provide distance measurement regardless of color and lighting of obstacles.

They also provide lower minimum distances and wider angles of detection to guarantee that obstacles are not missed by a narrow sensor beam.

THIS particular model is an upgrade from the lower precision HC-SRO4. This has 5 pins and can be used in 1pin trigger/echo or 2-pin.

The SRF05 UltraSonic range finder lets you find the distance of the objects in front of it. It does that by sending ultrasonic pulses and measures the time it takes for the pulses to travel to the obstacle and back.

Ultrasonic ranging module HY-SRF05 provides 2cm - 400cm non-contact measurement function, the ranging accuracy can reach to 3mm. The module includes transmitters, receiver and control circuit.

The SRF05 is an evolutionary step from the SRF04, and has been designed to increase flexibility, increase range, and to reduce costs still further. As such, the SRF05 is fully compatible with the SRF04. Range is increased from 3 meters to 4 meters. A new operating mode (tying the mode pin to ground) allows the SRF05 to use a single pin for both trigger and echo, thereby saving valuable pins on your controller. When the mode pin is left unconnected, the SRF05 operates with separate trigger and echo pins, like the SRF04. The SRF05 includes a small delay before the echo pulse to give slower controllers such as the Basic Stamp and Picaxe time to execute their pulse in commands. the module performance is stable, measure the distance accurately:

Can and SRF05, SRF02 ultrasonic distance measuring module and other comparable. Module precision, blind spots (2cm) super close, stable ranging success of this product to market under the strong!

Pins Details

5-Pin, One each for VCC, Trigger, Echo, Out and Ground.

Trig : Plusing a HIGH on this pin will send a Pulse

Echo : The pulse length is propotional to the distance from the obstacle (100usec to 25ms, times out if 30ms)

Specifications

Check the datasheet for details and graphs but these are the highlights:

- **Trigger Pin Format:** 10 uS digital pulse
- **Sound Frequency:** 40 kHz □ **Echo Pin Output:** 0-Vcc
- **Echo Pin Format:** output is DIGITAL and directly proportional with range. See our conversion formula above. □ **Measurement Range:** 2cm to ~4.5m
- **Measurement Resolution:** 0.3cm
- **Measurement Angle:** up to 15 deg
- **Measurement Rate:** 40 Hz
- **Supply Voltage:** 4.5V to 5.5V
- **Supply Current:** 10 to 40mA
- **Connector:** standard 5-pin male connector which can plug directly into breadboards.
- **Static current** : less than 2mA
- **Detection distance:** 2cm-450cm

Usage:

10US a control population of more than a high-fat, you can wait to receive high output port. A timer can be opened with the output timing, when the port goes low when the timer value can be read this when the time for this distance, only calculate the distance. This constant cycle of measurement, you can reach the value of the mobile measurement

The basic principle of work:

- Using I/O trigger for at least 10us high level signal
- The module automatically sends eight 40KHz and detect whether there is a pulse signal back
- If the signal back, through high level, time of high output IO duration is the time from sending ultrasonic to returning
- Test distance = high level time x velocity of sound (340m/s) / 2
- Display Format: 16 Characters x 2 lines